

# RM-30BP Compatibility (Rev.3.0)

“○” : works      “X” : doesn't work      “-” : NA

		HXR-NX5R	PXW-FS5		PXW-Z150	PXW-FS7	PXW-X180 /X160	PXW-Z100	FDR-AX1	HXR-NX100	HXR-NX3	HXR-NX1	HXR-NX5	HXR-NX70	HXR-MC2500	NEX-FS700/R	NEX-EA50	NEX-FS100
		V1.00	V2.0	(V3.0)	V1.0	V4.0	V3.1	V5.1	V4.0	V1.0	V2.0	V1.0	V2	V3.0	V1.0	V3.2	V2.0	V2.0
Zoom		○	○	○	○	○	○ (*4)	○	○	○	○	○	○	○	○	○	○	-
Iris	Auto/Manual	○	○	○	○	○	×	×	×	○	○	○	○	×	○	○	○	○
	Dial	○	○	○	○	○	×	×	×	○	○	○	○	×	○(*8)	○	○	○
	Push Auto Iris	○	○	○	○	○	×	×	×	○	○	○	○	×	○	○	○	○
Focus	Auto/Manual	○	○	○	○	○	×	×	×	○	○	○	○	×	○	○	○	○
	Dial	○	○	○	○ (*3)	○	×	×	×	○	○	○	○	×	○	○	○	○
	Push Auto Focus	○	○	○	○	○	×	×	×	×	×	×	○	-	○	×	×	○
REC Start/Stop		○	○	○	○	○	×	○(*7)	○(*7)	○	○	○	○	○	○	○	○	○
WHT BAL		○	○	○	○	○	×	×	×	○(*9)	○	○	○	×	○(*9)	○	○	○
PRESET		○	○	○	○	○	×	×	×	○(*9)	○	○	○	-	○(*9)	○	○	○
A		○	○	○	○	○	×	×	×	○(*9)	○	○	○	-	○(*9)	○	○	○
B		○	○	○	○	○	×	×	×	○(*9)	○	○	○	-	○(*9)	○	○	○
WB SET		○	○	○	○	○	×	×	×	○(*9)	○	○	○	×	○(*9)	○	○	○
GAIN		○	○	○	○	○	×	×	×	○	○	○	○	×	○	×	×	×
GAIN SELECT		○	○	○	×	○	×	×	×	×	○	○	○	×	×	×	×	×
SHUTTER		○	○	○	○	○	×	×	×	○	○	○	○	×	○	○	○	○
(SHUTTER SELECT) (*1)		○	○	○	×	○	×	×	×	×	○	○	○	×	×	○	○	○
Menu		○	○	○	○	○	×	×	×	○	○	○	○	○	○	○	○	○
SEL/SET	Up/Down	○	○	○	○	○	×	×	×	○	○	○	○	○	○	○	○	○
	Right/Left	○	○	○	○	○	×	×	×	○	○	○	○	○	○	○	○	○
	Execute	○	○	○	○	○	×	×	×	○	○	○	○	○	○	○	○	○
CANCEL/BACK		-	-	-	-	○	×	×	×	-	-	-	-	-	-	-	-	-
THUMBNAIL		○	○	○	○	○	×	×	×	×	×	×	×	-	×	×	×	×
DISPLAY		○	○	○	○	○	×	×	×	○	○	○	○	○	○	○	○	○
ASSIGN1		○	○	○	○	○	×	×	×	○	○	○	○	-	○	○	○	○
ASSIGN2		○	○	○	○	○	×	×	×	○	○	○	○	-	○	○	○	○
ASSIGN3		○	○	○	○	○	×	×	×	○	○	○	○	-	-	○	○	○
ASSIGN4		○	○	○	○	○	×	×	×	○	○	○	○	-	-	○	○	○
ASSIGN5		○	○	○	○	○	×	×	×	○	○	○	○	-	-	○	○	○
ASSIGN6		○	○	○	○	○	×	×	×	-	○	○	○	-	-	○	○	○
ASSIGN DIAL		-	○	○	-	○	-	-	-	-	-	-	-	-	-	-	-	-
ND	Auto/Manual	-	×	○	-	-	×	-	-	-	-	-	-	-	-	-	-	-
	Dial	-	×	○	-	-	×	-	-	-	-	-	-	-	-	-	-	-
	Push Auto ND	-	-	-	-	-	×	-	-	-	-	-	-	-	-	-	-	-
TALLY (*2)		○	×	○	×	×	×	×	×	×	×	×	×	×	×	×	×	×
COUNTER RESET (*2)		○	○	○	○	○	×	×	×	○	○	○	○	×	○	○	○	○
DAISY CHAIN		○	○	○	○	○	○	×	×	○	×	×	×	×	○	×	×	×

\*1) Use the joystick up/down for SHUTTER SELECT.

\*2) Command from MCX-500. No dedicated key on RM-30BP.

\*3) Not so smooth.

\*4) Very slow movement when in low speed zoom operation.

\*5) Works on RM-1BP Focus.

\*6) Work on RM-1BP REC Start/Stop.

\*7) No REC Tally on RM-30BP.

\*8) Press "IRIS Auto/Man" button on camcorder first.  
Only available when IRIS icon on OSD is white.

\*9) Press "WHT BAL" button on a camcorder first.