

# USER GUIDE

DB

V 1.0



## DANTE NDI BRIDGE

© BirdDog Australia 2020

NDI

BirdDog | DANTE NDI BRIDGE

NDI — ×

Network: Office 2.4



Dante

Dante to NDI

CONFIGURE

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI Output name:

Dante\_to\_NDI\_01

Dante\_to\_NDI\_02

Dante\_to\_NDI\_03

NDI to Dante

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

NDI source:

NDI\_to\_Dante\_01

NDI\_to\_Dante\_02

NDI\_to\_Dante\_03

## A SHORT WALK THROUGH DANTE NDI BRIDGE

- 1 Choose your Network Adaptor (your Dante Network).
- 2 Activate or Deactivate the BirdDog Comms Pro compatibility.
- 3 Dante to NDI
  - If No. of Audio Channels is set on "6 Channels", you need to choose an NDI Output Name for your Dante to NDI.
  - If No. of Audio Channels is set on "Stereo Pair", you need to choose all 3 NDI Output Names for your Dante to NDI.
- 4 NDI to Dante
  - You need to select which NDI Source you prefer to use.
- 5 Once the above settings are complete you can activate Dante with the toggle.


### Allow the software to load

- 6 Once running you can turn ON/OFF Dante to NDI or NDI to Dante (these functions are only active once Dante is turned on as per instruction 5)

### NOTE:

To modify the NDI Output Name or the NDI source, you need to turn OFF the Dante main toggle (5)

To access the free Dante Controller just press the CONFIGURE button on the top-right side. (7). Dante Controller is required to be running somewhere on the network.

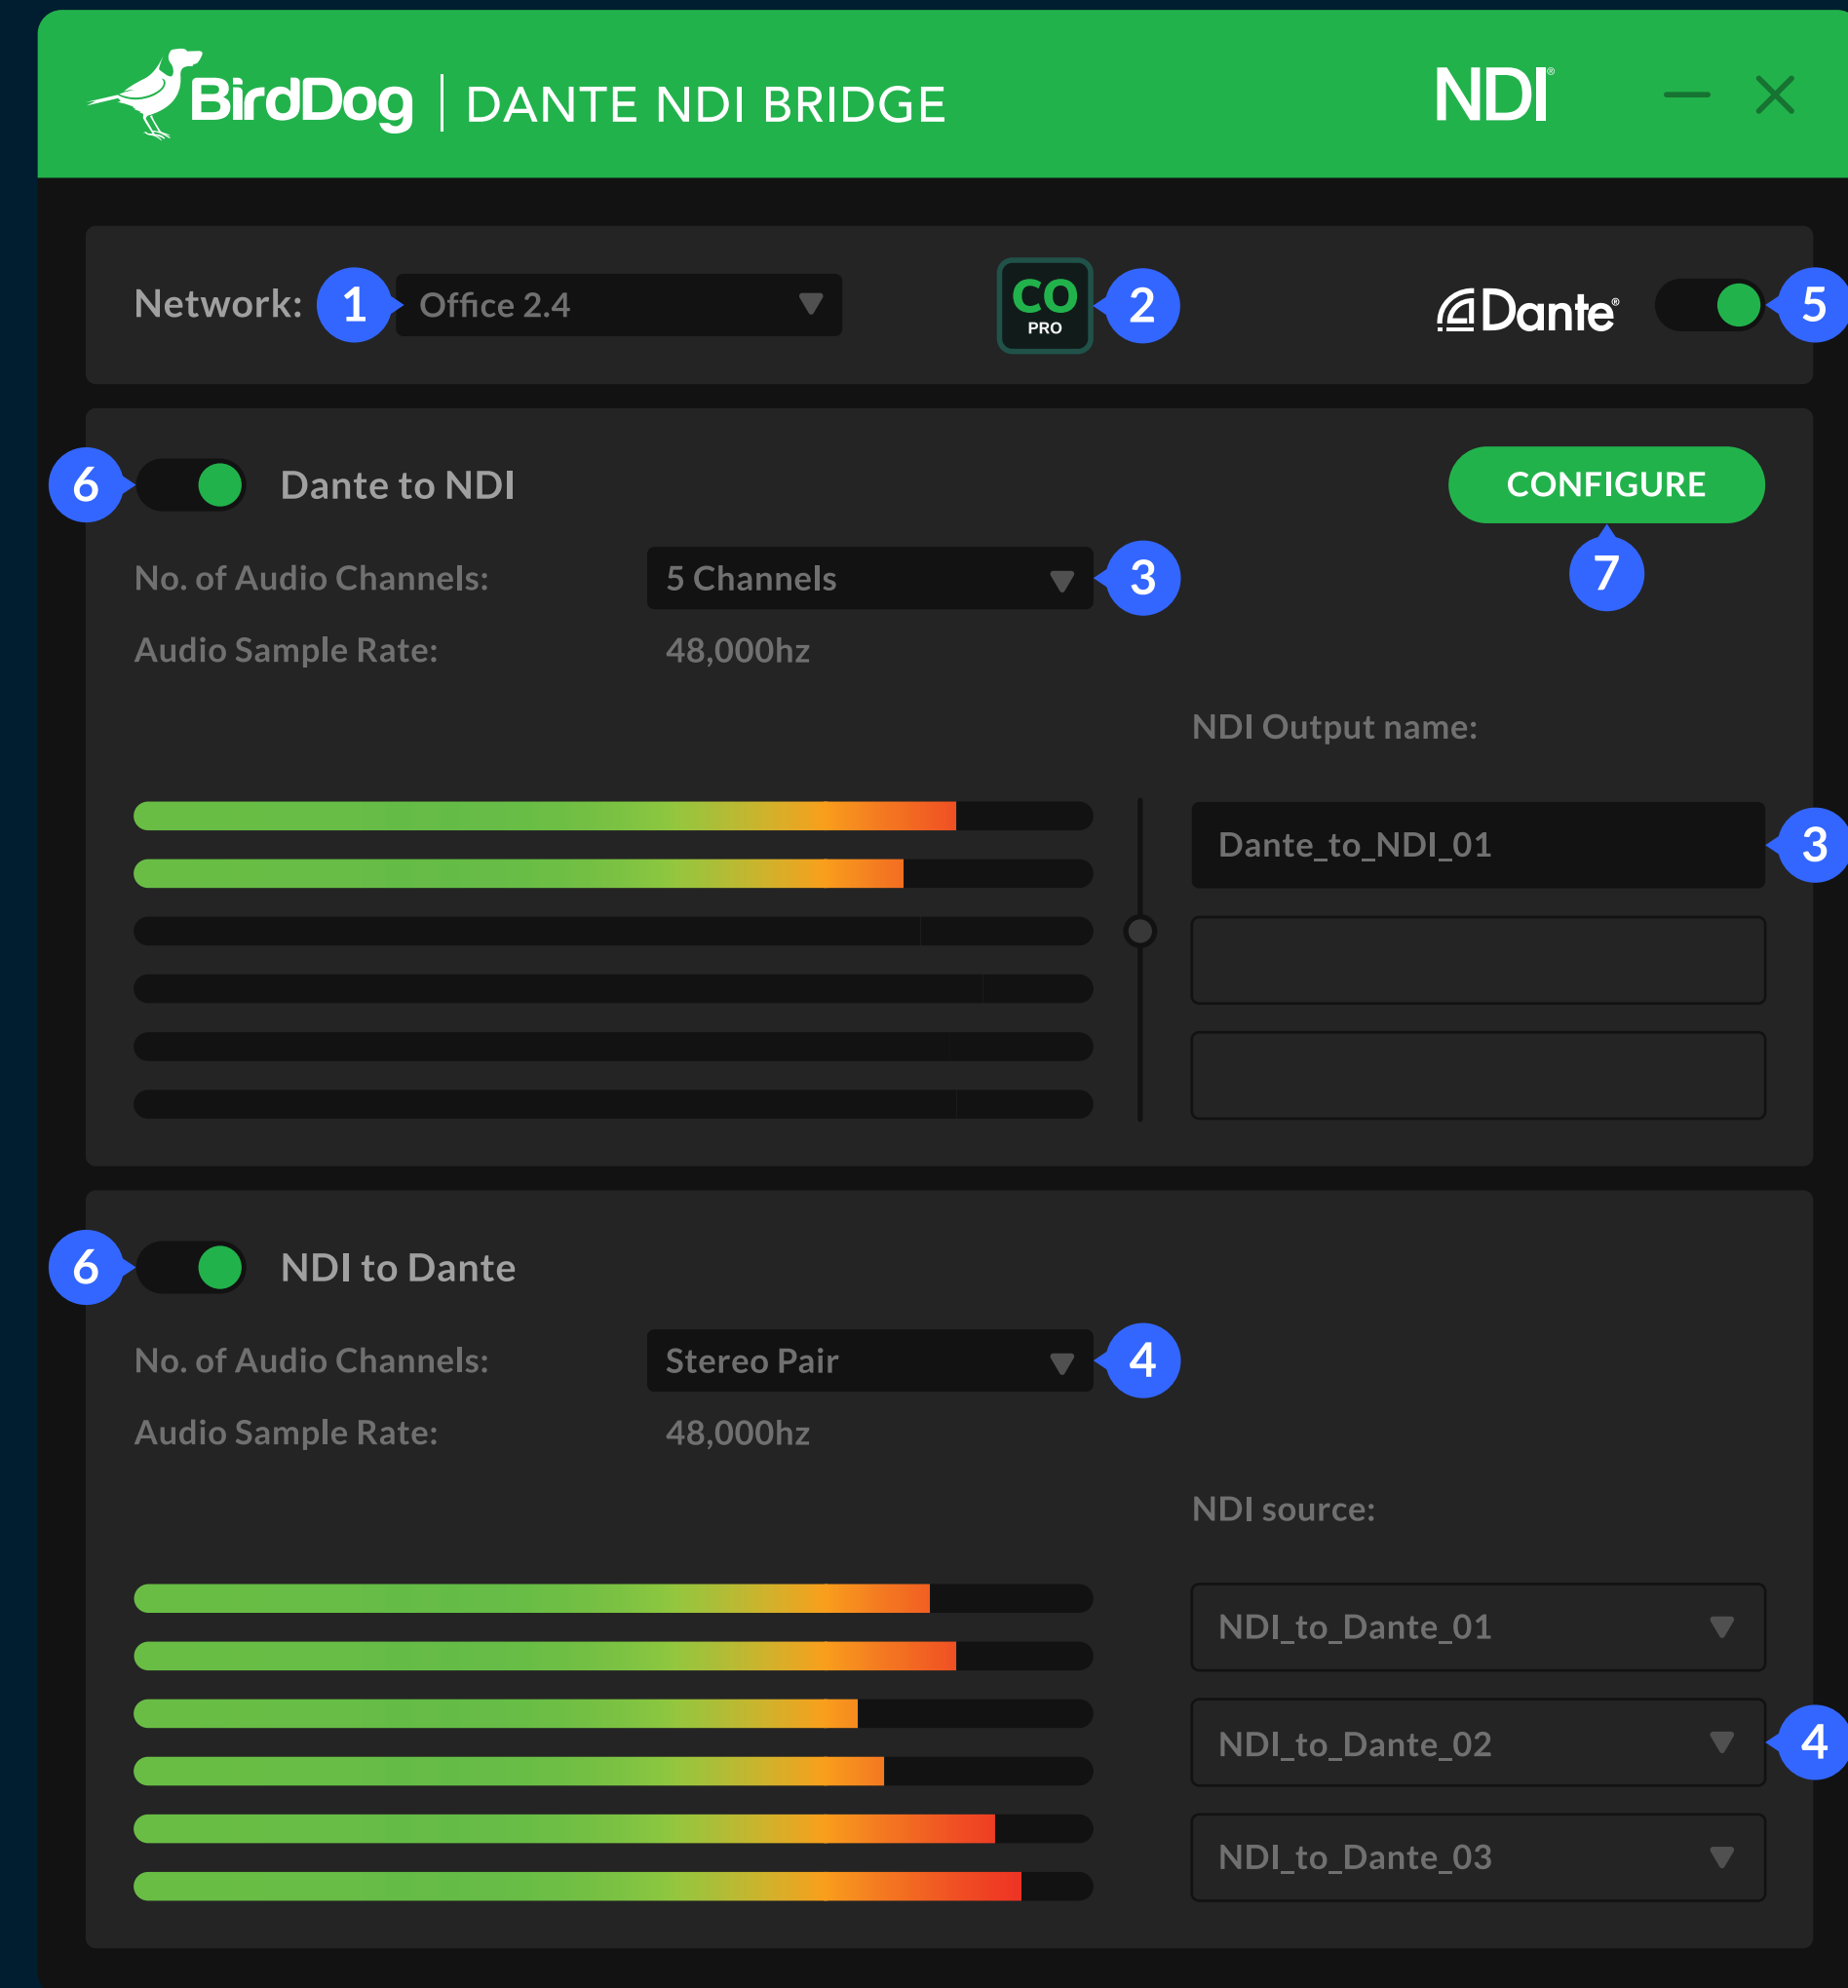



Network: Office 2.4



Dante



Select the desired Network

Activate/Deactivate Dante

Dante to NDI

CONFIGURE

Activate/Deactivate Dante to NDI

Access to your device settings

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

Select the number of Audio Channels between Stereo Pair and 6 Channels

NDI Output name:

Dante\_to\_NDI\_01

Dante\_to\_NDI\_02

Dante\_to\_NDI\_03

Type your personal NDI Output name

NDI to Dante

No. of Audio Channels: Stereo Pair

Audio Sample Rate: 48,000hz

Activate/Deactivate NDI to Dante

Select the number of Audio Channels between Stereo Pair and 6 Channels

NDI source:

NDI\_to\_Dante\_01

NDI\_to\_Dante\_02

NDI\_to\_Dante\_03

Select your NDI source

### IMPORTANT NOTES:

Ensure Internet connection

Install NDI Tools  
[click here](#)

Install Dante Controller  
[click here](#)

Help & Support  
[help@bird-dog.tv](mailto:help@bird-dog.tv)

Click the main logo to go to settings

**BirdDog** | DANTE NDI BRIDGE NDI — ✕

Network: Office 2.4 CO PRO Dante

Dante to NDI COMMS Compatibility inactive CONFIGURE

Channels: Stereo Pair  
Audio Sample Rate: 48,000hz

NDI Output name:

- Dante\_to\_NDI\_01
- Dante\_to\_NDI\_02
- Dante\_to\_NDI\_03

NDI to Dante COMMS Compatibility active

Channels: Stereo Pair  
Audio Sample Rate: 48,000hz

NDI source:

- NDI\_to\_Dante\_01
- NDI\_to\_Dante\_02
- NDI\_to\_Dante\_03

Turn Dante ON to control this switch

Turn Dante ON to control this switch

**BirdDog** | DANTE NDI BRIDGE NDI — ✕

Network: Office 2.4 CO PRO Dante

Dante to NDI COMMS Compatibility active CONFIGURE

No. of Audio Channels: Stereo Pair  
Audio Sample Rate: 48,000hz

NDI Output name:

- Dante\_to\_NDI\_01
- Dante\_to\_NDI\_02
- Dante\_to\_NDI\_03

NDI to Dante COMMS Compatibility active

No. of Audio Channels: Stereo Pair  
Audio Sample Rate: 48,000hz

NDI source:

- NDI\_to\_Dante\_01
- NDI\_to\_Dante\_02
- NDI\_to\_Dante\_03

Turn Dante OFF to control this section