

**取扱説明書**  
**Operating Instructions**  
**Manuel d'utilisation**  
**Bedienungsanleitung**  
**Istruzioni d'uso**  
**Instrucciones de funcionamiento**  
**使用説明書**  
**Инструкция по эксплуатации**

**DC カプラー**  
**DC COUPLER**  
**COUPLEUR C.C.**  
**DC-VERBINDUNGSSTÜCK**  
**ADAPTADOR DC**  
**DC 電源組**  
**DC ПЕРЕХОДНИК**

**日本語**  
**品番 DMW-DCC5**

このたびは、パナソニック製品をお買い上げいただき、まことにありがとうございます。  
 ●取扱説明書をよくお読みのうえ、正しく安全にお使いください。  
 ●この取扱説明書は大切に保管してください。  
 ●パナソニック製 ACアダプター (別売：DMW-AC5) をお使いください。

この DCカプラーは、パナソニック製デジタルカメラ専用で、ACアダプターをデジタルカメラにつなげるものです。

- **使いかた**  
**各部の名前：**  
 Ⓐ: カード/バッテリー扉  
 Ⓑ: DCカプラー  
 Ⓒ: [DC IN]端子  
 Ⓓ: カプラーカバー  
 Ⓔ: 挿入方向マーク  
 Ⓕ: ACアダプター  
 Ⓖ: 電源コード

- 準備：  
 ●デジタルカメラの電源を[OFF]にしてください。  
 ●電源コードをACアダプターと電源コンセントにつないでください。

- 接続方法：  
 ① カード/バッテリー扉を開ける  
 ② DCカプラーを向きに気をつけて入れる  
 ③ カード/バッテリー扉を確実に閉じる  
 ④ カプラーカバーを開ける
  - 開けにくい場合は、カード/バッテリー扉を開いた状態で、内側からカプラーカバーを押して開けてください。
 ⑤ ACアダプターをDCカプラーの[DC IN]端子に接続する (挿入方向マークを合わせて接続してください)

- **使用上のお願い**  
 ●使用中はデジタルカメラが温かくなりますが、異常ではありません。  
 ●ご使用のデジタルカメラの取扱説明書を必ずお読みください。  
 ●必要がない場合は、DCカプラーをACアダプターとデジタルカメラから取り外しておいてください。  
 ●また、カプラーカバーを閉じておいてください。  
 ●DCカプラーおよびACアダプター接続時は、デジタルカメラを立てておくことができます。置いて作業をする場合は、柔らかい布の上に置くことをおすすめします。

■ **仕様**  
**外形寸法：** 約 幅30.5 mm × 高さ41.6 mm × 奥行き 9.5 mm  
**質量：** 約 7 g  
 —このマークがある場合は—

**ヨーロッパ連合以外の国の廃棄処分に関する情報**  
 このシンボルマークは EU 域内でのみ有効です。  
 製品を廃棄する場合には、最寄りの市町村窓口、または販売店で、正しい廃棄方法をお問い合わせください。

■ **お問い合わせ先**

**パナソニック LUMIX (ルミックス) ご相談窓口**  
 365日 受付9時～20時

**電話**  
 フリーダイヤル **0120-878-638**  
※携帯電話・PHSからもご利用いただけます。

■ 上記番号がご利用いただけません場合は  
**06-6907-1187**  
 ■ FAX フリーダイヤル **0120-878-236**

パナソニック株式会社  
 AVC ネットワークス社  
 〒571-8504 大阪府門真市松生町1番15号

**ENGLISH**  
**Model No. DMW-DCC5**

- This DC coupler is exclusively for Panasonic digital cameras and used for connecting the AC adaptor and digital camera.
- Always use a genuine Panasonic AC adaptor (DMW-AC5; optional).

- **How to use**  
**Name of the Components:**  
 Ⓐ: Card/battery door  
 Ⓑ: DC coupler  
 Ⓒ: [DC IN] socket  
 Ⓓ: Coupler cover  
 Ⓔ: Insertion direction marks  
 Ⓕ: AC adaptor  
 Ⓖ: AC cable

- Preparation:**  
 ● Turn the camera off.  
 ● Connect the AC cable to the AC adaptor and a wall outlet.

- How to connect:**  
 ① Open card/battery door.  
 ② Insert paying attention to the direction of the DC coupler.  
 ③ Close the card/battery door and ensure it is closed.  
 ④ Open the coupler cover.
  - If it is difficult to open, push open the coupler cover from the interior with the card/battery door in an open state.
 ⑤ Connect the AC adaptor to the [DC IN] socket of the DC coupler. (connect by aligning the insertion direction marks.)

- **Precautions for use**  
 ● The camera becomes warm during use. This is not a malfunction.  
 ● Be sure to read the operating instructions of your digital camera.  
 ● If the DC coupler is not necessary, then remove it from the AC adaptor and the digital camera. Also, please keep the coupler cover closed.  
 ● When the DC coupler and AC adaptor are connected, the digital camera cannot sit upright. When setting the camera down and operating this camera, it is recommended to put the digital camera on a soft cloth.

■ **Specifications**  
**Dimensions:** Approx. 30.5 mm (W)×41.6 mm (H)×9.5 mm (D)  
 [1 1/4" (W)×1 11/16" (H)×3/8" (D)]  
**Mass (Weight):** Approx. 7 g/0.2469 oz

—If you see this symbol—

**Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)**

This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product. Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

**For business users in the European Union**  
 If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

**Information on Disposal in other Countries outside the European Union**  
 This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

**ONLY FOR U.S.A. AND PUERTO RICO**

**Panasonic Consumer Marketing Company of North America, Division of Panasonic Corporation of North America**  
 One Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Products Limited Warranty**

**Limited Warranty Coverage (For USA and Puerto Rico Only)**  
 If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Marketing Company of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Digital Camera Accessories	90 Days	90 Days
Batteries (Non-rechargeable batteries are not warranted.)	10 Days	Not Applicable

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

**Mail-In Service**  
 For assistance in the U.S.A. and Puerto Rico in obtaining repairs, please ship the product prepaid to:  
**Panasonic Exchange Center**  
**4900 George McVay Drive**  
**Suite B**  
**McAllen, TX 78503**  
**panacare@us.panasonic.com**

**Customer Services Directory (United States and Puerto Rico)**

**Obtain Product Information and Operating Assistance; locate your nearest Dealer or Service Center; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:**  
<http://www.panasonic.com/help>  
**or, contact us via the web at:**  
<http://www.panasonic.com/contactinfo>  
 You may also contact us directly at:  
 1-800-211-PANA (7262)  
 Monday-Friday 9am-9pm, Saturday-Sunday 10am-7pm EST

**For hearing or speech impaired TTY users, TTY: 1-877-833-8855**

**Accessory Purchases (United States and Puerto Rico)**

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:  
<http://www.pstc.panasonic.com>  
 Or, send your request by E-mail to:  
[npcparts@us.panasonic.com](mailto:npcparts@us.panasonic.com)  
 You may also contact us directly at:  
 1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)  
 (Monday-Friday 9am-9pm EST)  
 Panasonic National Parts Center  
 20421 84th Ave S., Kent, WA 98032  
 (We accept Visa, Master Card, Discover Card and American Express.)

**For hearing or speech impaired TTY users, TTY: 1-866-605-1277**

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".**  
**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.**  
 (As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)  
**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.  
 This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.  
**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.**

**ONLY FOR CANADA**

**Panasonic Canada Inc.**  
 5770 Ambler Drive, Mississauga, Ontario L4W 2T3  
**PANASONIC PRODUCT – LIMITED WARRANTY**

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

Digital Camera	One (1) year, parts and labour
Digital Camera Peripherals	One (1) year, parts and labour
Digital Camera Accessories	Ninety (90) days, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

**IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED**

**LIMITATIONS AND EXCLUSIONS**  
 This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, improper batteries, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries, printer ink cartridge and paper are also excluded from coverage under this warranty. Rechargeable batteries are warranted for ninety (90) days from date of original purchase.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES resulting from the use of this product or arising out of any breach of any express or implied warranty. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

**WARRANTY SERVICE**  
**For product operation and information assistance, please contact:**  
 Our Customer Care Centre:  
 Telephone: 1-800-99-LUMIX (1-800-995-8649)  
 Fax #: (905) 238-2360  
 Email link: [lumixconciierge@ca.panasonic.com](mailto:lumixconciierge@ca.panasonic.com)

For defective product exchange within the warranty period, please contact the original Dealer or our Customer Care Centre.

Pursuant to the applicable EU legislation  
 Panasonic Marketing Europe GmbH  
 Panasonic Testing Centre  
 Winsbergring 15, 22525 Hamburg, Germany



